Other sounds:

F9: Conductor's whistle

F10: Doors closing

F16: "All aboard please"

F17: "This train will depart

in two minutes"

F18: Running with goods

wagons

F19: Running with bogie

coaches


F20: Railway crossing

warning signal

F26: Mute

F27: Volume down

F28: Volume up

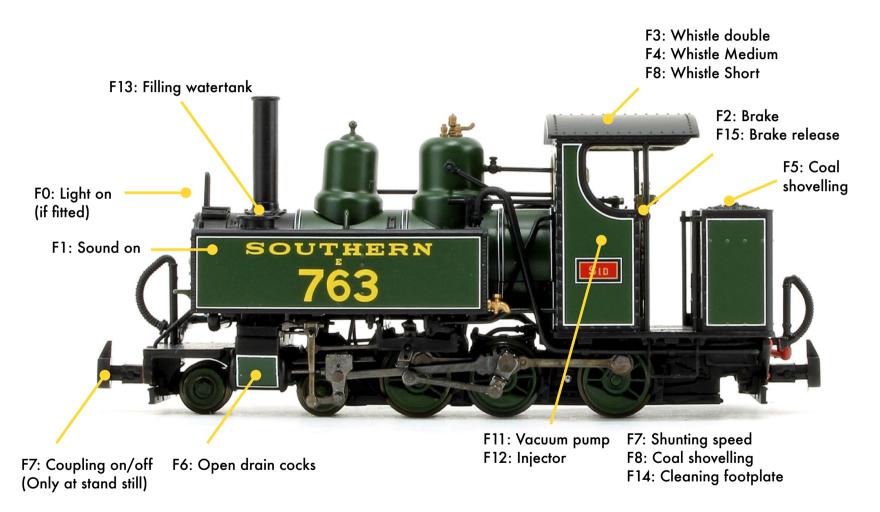

Functions List & Sound Slots

FUNCTIONS LIST

- FO: Light on
- F1: SOUND ON/OFF
- F2: Brake key (CV309) + Brake sound (short)
- F3: Whistle short
- F4: Whistle long (stops when released)
- F5: Coupling on/off (only at stand still) Change F key with CV 986
- F6: Open drain cocks (cylinder blow out)
- F7: Shunting
- F8: Coal shovelling (fire box on when on Output 1)
- F9: Conductor's whistle
- F10: Doors closing
- F11: Vacuum pump
- F12: Injector
- F13: Filling water tank
- F14: Wiping floor with broom
- F15: Cleaning footplate
- F16: "All aboard please"
- F17: "This train will depart in two minutes"
- F18: Rail running sound with goods wagons
- F19: Rail running sound with bogie coaches
- F20: Railway crossing warning signal
- F21:
- F22: -
- F23: -
- F24: -
- F25:
- F26: Mute key
- F27: Vol- (CV396)
- F28: Vol+ (CV397)

SOUND SLOTS

- 13 Safety valve 1
- 14 Braking sound 3
- 15 Braking sound 1
- 16 Braking sound 2
- 17 Open Drain Cocks
- 18 Brake release
- 19 Injector
- 20 Rail running sound with goods wagons
- 21 "All aboard please"
- 22 Vacuum pump
- 23 "This train will depart in two minutes"
- 24 Rail running sound with bogie coaches
- 25 Couple
- 26 Uncouple
- 28 Safety valve 2
- 29 Cleaning footplate
- 30 Filling water tank
- 31 Vacuum pump
- 32 Doors closing
- 33 Conductor's whistle
- 34 Whistle short.way
- 35 Whistle double
- 36 Whistle medium
- 37 Coal shovelling
- 38 Porthmadog NG Railway Crossing

Notes

The **sound chuff** on this sound file for Zimo decoders has been tuned for the Bachman 009 model. You can adjust the speed of the chuffs in CV 267 if you are using this for another model. The default is 70.

Departure whistle on by default. To turn off: CV 581 > 0. To turn on, CV 581 > 34

Brake key on by default. To turn off: change CV 4 (default 25). If you want the roll out to be more, increase the value of CV 4 to 110, for example.

Tramfabriek Sound Experience