

Mainline Hunslet

F9: Conductor's whistle
F16: "All aboard please"
F17: "This train will depart in two minutes"



F20: Level crossing warning signal (Ffestiniog, Porthmadog)

F0: Light

F1: Engine sound

F7: Coupling on/off (Only at stand still)

F6: Open drain cocks

F10: Doors closing
F18: Running sound with goods wagons
F19: Running sound with bogie coaches

F26: Mute
F27: Volume down
F28: Volume up

F12: Curve wheel squeal

F22: Air brake


F11: Injector

F14: Filling watertank

F2: Brake

F3: Whistle short*
F4: Whistle long*
* F24 Off = Blanche, On = Linda
F5: Whistle short at stand, long at drive
F21: Whistle long (playable)

F8: Coal shovelling
F13: Wiping floor with broomstick
F15: Cleaning footplate

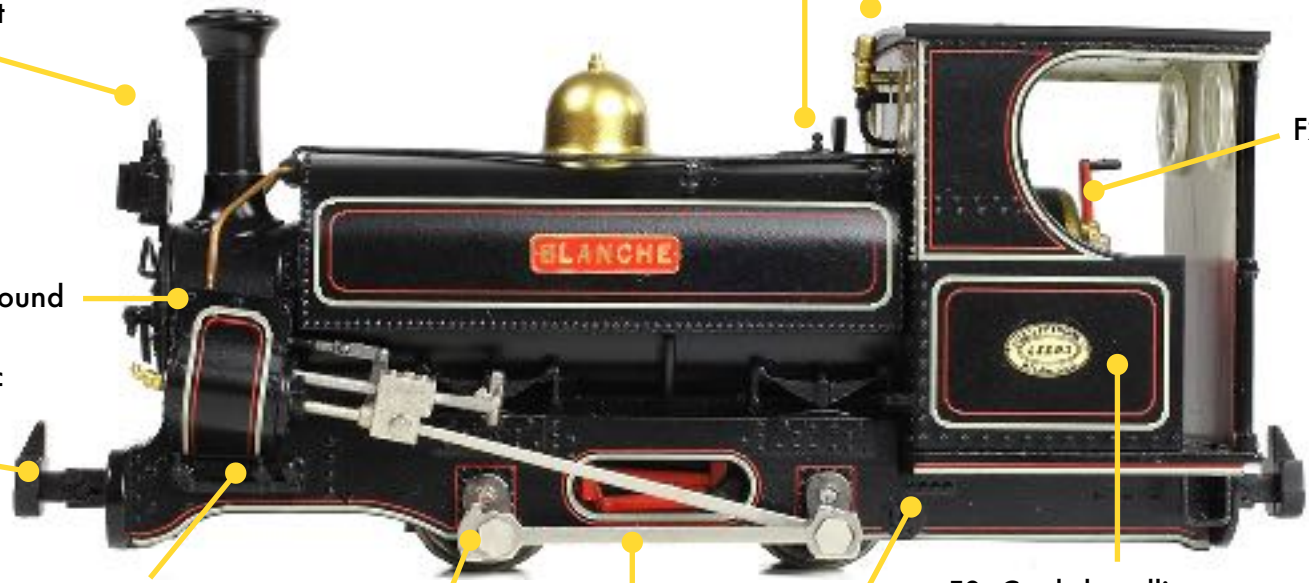

FUNCTION LIST

- F0: Light on
- F1: SOUND ON/OFF
- F2: Brake key (CV309) + Brake sound (short)
- F3: Whistle Short (Change whistle with F24)
- F4: Whistle Long (Change whistle with F24)
- F5: Whistle short at stand, long at drive
- F6: Open drain cocks (cylinder blow out)
- F7: Coupling on/off (only at stand still) - Change F key with CV 986
- F8: Coal shovelling (fire box on when on Output 1)
- F9: Conductor's whistle (3 variations) - Change F key with CV 989
- F10: Doors closing
- F11: Injector
- F12: Curve wheel squeal
- F13: Wiping floor with broomstick
- F14: Filling water tank
- F15: Cleaning footplate
- F16: "All aboard please"
- F17: "This train will depart in two minutes"
- F18: Rail running sound with goods wagons
- F19: Rail running sound with bogie coaches
- F20: Level crossing warning signal
- F21: Whistle long (playable)
- F22: Air brake
- F23: -
- F24: Whistle selector. Off = Blanche, On = Linda
- F25: -
- F26: Mute key
- F27: Vol- (CV396)
- F28: Vol+ (CV397)

SOUND SLOTS

- 21 "All aboard, please!"
- 22 Open drain cocks
- 23 "This train will depart in two minutes"
- 24 Air brake
- 25 Coasting
- 26 Cleaning footplate
- 27 Cleaning with broomstick
- 28 Wheel squeal
- 29 Engine hiss
- 30 Injektor
- 31 Couple
- 32 Doors closing
- 33 Un-couple
- 34 Braking squeal
- 35 Brake blow
- 36 Conductor's whistle double
- 37 Conductor's whistle long
- 38 Conductor's whistle short
- 39 Rail clank bogies
- 41 Coal shovelling
- 42 Brake press
- 43 Whistle Blanche high short
- 44 Whistle Blanche low medium
- 45 Whistle Blanche low short
- 46 Whistle Blanche high long
- 47 Whistle Linda high double
- 48 Whistle Linda high short
- 49 Filling water
- 50 Linda safety valve
- 51 Goods wagons rail clank
- 52 Whistle Blanche long latching
- 53 Level crossing warning signal Porthmadog

Notes

The **sound chuff** on this sound file for Zimo decoders has been tuned for the Heljan model. You can adjust the speed of the chuffs in CV 267 if you are using this for another model. The default is 70.

The **whistles** at F3 and F4 can sound differently. Activate or de-activate F24 to change the sound. Off = Blanche, On = Linda

A **Departure whistle** is available. To turn on: Enter the sound slot number (see list page 2 of these instructions) in CV 581.

The **Brake key** is on by default. To turn off: change CV 4 (default 25) to a lower number, like 10. If you want the roll out to be more, increase the value of CV 4 to 110, for example.

The **Coupling** (F5) has been set up so that when you are running the train and activate the button, no sound is played. Only when you come to a full stop to couple up, the coupling sound plays. Leave the button activated until you want to uncouple. The uncoupling sound is only played at a stand still.

The **Random Sounds** will appear once in a while. Follow the instructions in the Zimo manual to change their timing.

Z1: Injector

Z2: Coal shovelling and fire box glow

Z3: Clearing footplate

Tramfabriek Sound Experience

© By Tramfabriek Ltd 2024 - <http://tramfabriek.co.uk>

TRAMFABRIEK